



# Fix the Mix!

SEQUENCING GAME



**Twist, roll, push, squeeze and spin until everything's in order!**

## Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

## Learning Skills

**Move the "Fix-its" to put songs and patterns in the right order!**

### Sequencing Skills

Children are challenged to put segments of a set in the correct order, which helps develop sequencing skills.

### Motor Skills

Build fine motor skills by twisting, rolling, pushing, squeezing or spinning the five interactive buttons to activate the sounds.

### Memory Skills

The FIX THE MIX!™ game can strengthen memory skills by challenging children to remember where the segments are hidden.

### Learning Levels

Features three levels, which allow children to progress to more challenging curriculum as they acquire new skills and confidence.

## Expand the learning fun! Collect them all.

Bop around!  
Learn letters and  
letter sounds.



**LETTER CRAZY!™  
Phonics Game**

3-6 years

Listen, remember and match!  
3 in a row wins.



**MATCH UP!™  
Concentration Game**

3-6 years

Twist & Spin!  
Get the sequence right to win.



**FIX THE MIX!™  
Sequencing Game**

3-6 years

Additional games sold separately. All items may not be available in all markets. Actual product may vary.



## See the Learning.™

Learning experiences are never one-size-fits-all. That's why we created an online Learning Path that can be custom-tailored to shape and inspire each child's unique learning journey. Connect and see what they're learning, how they're growing and, most importantly, who they're becoming.

[leapfrog.com/learningpath](http://leapfrog.com/learningpath)



## Register your product online!


You can also sign up to receive email updates with special offers, educational insights and the latest in learning from LeapFrog.

**leapfrog.com**

Don't have web access? See the reverse side for instructions on how to register by mail.

## Instructions for Play

**Twist, roll, push, squeeze or spin the Fix-its to activate the audio**

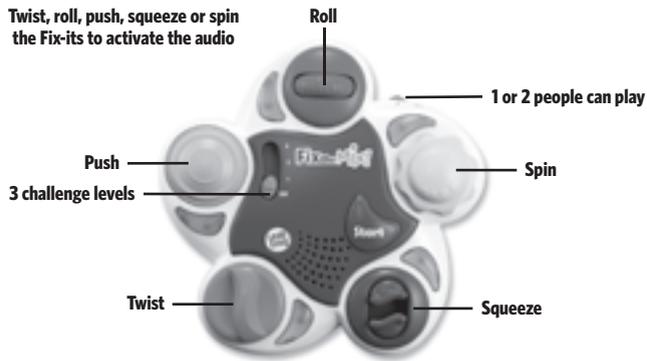

### Getting Started

To turn on the FIX THE MIX!™ game, slide the switch from the OFF position to one of the 3 level positions. Turn off the game by returning the switch to the OFF position.

**Note:** The FIX THE MIX! game will automatically turn off after 1 minute of inactivity. You can turn it on again by sliding either of the switches or pressing the blue Start button.

### Game Levels

The FIX THE MIX! game features 3 levels of play. Each level can be played by moving the switch from the OFF position to one of the levels (1, 2 or 3).

In each level, your child will be asked to put various songs and patterns in the correct order. The song or pattern will play through once at the start of each game. When each Fix-it is moved, it plays a segment of the song or pattern. Your child must move the five Fix-its in the right order to win.

**Level 1:** In the first level, your child will be introduced to sequencing numbers and a short song. There is no scoring at this level.

**Level 2:** The second level introduces counting in a foreign language, daily routines, days of the week, early science and more. Your child will receive a score at the end of each round.

**Level 3:** In the third level, your child can continue to explore sequences that are increasingly challenging, including counting by 2s, 5s and 10s, counting backwards, the *Alphabet Song* and the months of the year. Your child will receive a score at the end of each round.

**1- and 2-Player Modes:** All 3 challenge levels can be played in 1- or 2-player mode. In 2-player mode, players take turns completing one round of play. The FIX THE MIX! game will let you know when it is each player's turn. The first player to complete the sequence in the correct order wins.

### Instructions For Care

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

### Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AA alkaline batteries (called LR6 in some countries).

#### Battery Removal and Installation Instructions

1. Open the battery door with a screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

### Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

**DO NOT** incinerate used batteries.

**DO NOT** dispose of batteries in fire, as batteries may explode or leak.

**DO NOT** mix old and new batteries or types of batteries (i.e., alkaline/standard).

**DO NOT** use rechargeable batteries.

**DO NOT** recharge non-rechargeable batteries.

**DO NOT** short-circuit the supply terminals.

### Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

**NE PAS** incinérer les piles usagées.

**NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.

**NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

**NE PAS** utiliser des piles rechargeables.

**NE PAS** recharger des piles non rechargeables.

**NE PAS** court-circuiter les terminaux d'alimentation.

## Troubleshooting

### Symptom

Toy does not turn on or does not respond

### Try This

- Make sure the OFF/Levels switch is not in the OFF position
- Make sure batteries are correctly installed
- Make sure battery cover is securely attached
- Remove batteries and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Toy makes improper responses

- Follow the above instructions to clean battery contacts
- Install new batteries

**U.S. Consumer Service Contact:** Visit our U.S. Consumer Support website at <http://www.leapfrog.com/support> 24 hours a day, or call (800) 701-LEAP (5327) during normal business hours.

**Canada Consumer Service Contact:** Visit our Canada Consumer Support website at <http://lfcana.custhelp.com> 24 hours a day, or call (800) 701-LEAP (5327) during normal business hours.

**U.K. Consumer Service Contact:** Visit our U.K. Consumer Support website at <http://leapfroguk.custhelp.com> 24 hours a day, or call 0800 169 5435, or Eire +44 1702 200244, during normal business hours.

**Australia Consumer Service Contact:** Please submit questions to our support staff via email at [info@funtastic.com.au](mailto:info@funtastic.com.au) or free-call 1800 244 543 during normal business hours.

### FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

**NOTE:** Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment. This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

**IMPORTANT: If you have a problem with this product, return it to the retailer where the product was purchased for exchange. If the retailer is unable to assist you for any reason, contact LeapFrog Consumer Services. If our service representative is unable to help you resolve the problem, you will be given instructions on how to replace the product and an authorization number. Returns must have a Return Merchandise Authorization (RMA) number to be accepted at our warehouse. If you need replacement parts for this product, please contact LeapFrog Consumer Services.**

**LIMITED WARRANTY:** Subject to a limited three (3) month warranty. Please call Consumer Support at one of the numbers listed to the left, or visit our website at [www.leapfrog.com](http://www.leapfrog.com) for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

**GARANTIE LIMITÉE :** Soumis à une garantie limitée de trois (3) mois. Veuillez s'il vous plaît communiquer avec notre service à la clientèle au (800) 701-LEAP (5327) ou voir notre site internet à [www.leapfrog.com](http://www.leapfrog.com) pour tous les renseignements. LeapFrog ne pourra être tenu responsable de tout dommage accessoire ou indirect découlant de la violation de toute garantie reliée à ce produit. Certaines juridictions ne permettent pas l'exclusion ou la limitation de dommages accessoires ou indirects, ou la limitation de la durée d'une garantie implicite, par conséquent, les limites ou exclusions précédentes peuvent ne pas s'appliquer à tous.

### Product Registration

Register your product online at [leapfrog.com](http://leapfrog.com) or just mail us the following information:

- First and last name
- Street address, city, state, zip code
- Age of purchaser
- Email address
- Child's birth date (optional)
- The LeapFrog product that you purchased
- Yes, sign me up for email news from LeapFrog (optional)

Privacy Policy: To view LeapFrog's privacy statement, go to [leapfrog.com](http://leapfrog.com).

### U.S. Residents

Mail your information to:  
LeapFrog  
ATTN: Product Registration  
P.O. Box 981123  
El Paso, TX 79998-1123

### U.K. Residents

Mail your information to:  
LeapFrog Toys (U.K.) Limited  
36 Windsor Street, Uxbridge  
Middlesex, UB8 1AB  
UNITED KINGDOM

### Canadian Residents

Mail your information to:  
LeapFrog Canada  
466 Speers Rd., 3rd Floor  
Oakville, Ontario  
L6K 3W9  
CANADA

### Residents of Australia and New Zealand

Mail your information to:  
Funtastic Limited  
635 Waverley Road  
Glen Waverley  
Victoria 3150  
AUSTRALIA

Registration of your product is not required for your warranty or your use of your product.

LEAPFROG, the LeapFrog logo, the LeapFrog Learning Path logo, SEE THE LEARNING, FIX THE MIX!, MATCH UP! and LETTER CRAZY! are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © 2007 LeapFrog Enterprises, Inc. All rights reserved.

### leapfrog.com

For ages 3-6 years. Convient aux enfants de 3 à 6 ans.

Part number: 605-11247-A