

## More fun learning toys from LeapFrog!

### Preschool



Word Whammer™  
Fridge Phonics™ Set



Fridge Phonics™  
Magnetic Letter Set



100 Hoops  
Basketball Counting Game  
Bilingual! Count to 100 in English and Spanish!

Some products may not be available in all markets.

## Inspiring a Lifelong Love of Learning

- ✓ **EARLY READING**  
The learning screen lights up to show uppercase and lowercase letters, which helps develop letter-recognition skills.
- ✓ **NUMBERS AND COUNTING**  
Rhyming songs introduce numbers 1-20, both up and down. The learning screen reinforces auditory learning with visuals of the numbers.
- ✓ **PHYSICAL DEVELOPMENT**  
Engaging music encourages children to move and dance along as Fridge DJ™ spins learning songs!

Dear Parent,

We at LeapFrog know that you are your child's most important teacher. Our goal is to help you build an environment for your child that is rich in experiences—one that encourages discovery and fosters learning success.

As children grow, they are ready for more complex challenges. For preschoolers, we have a line of products that develop basic fundamentals to help prepare children to enter the classroom. Cheerful characters and delightful songs enhance the play experience while teaching the alphabet, phonics, vocabulary, colors/colours, numbers and counting.


LeapFrog® learning toys are designed to grow alongside your child through each stage of development. All are made with the same playful spirit that promotes a lifelong love of learning. For additional information on how to make learning fun and effective, visit our Web site ([www.leapfrog.com](http://www.leapfrog.com)), where you'll find tips from parents and educators. We hope you'll join us there.

Sincerely,

Tom Kalinske  
CEO  
LeapFrog Enterprises, Inc.

## Parent Guide & Instructions

This guide contains important information.  
Please keep it for future reference.

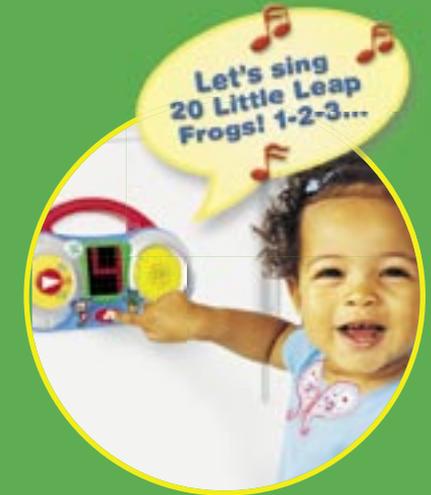

Learning songs and light show—  
on the fridge or on the go!




**Fridge DJ™**  
**Magnetic Learning Radio**

[www.leapfrog.com](http://www.leapfrog.com)

## INSTRUCTIONS FOR PLAY

Hear learning songs that rock!

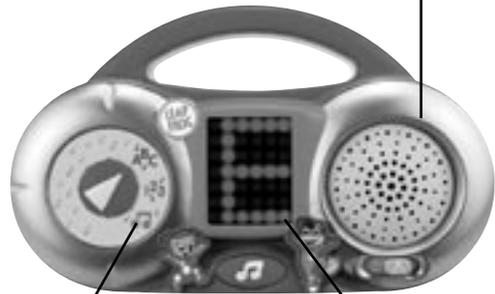

Three learning stations!

See numbers and letters light up!

## Lively music, learning songs and animated lights help your child learn numbers, letters and more!

### To play, switch on and press

Listen to three learning stations on the dial!

**123** Number Songs!

**ABC** Letter Songs!

 Classic Songs!

### Learn on the fridge or on the go!

#### Battery Information:

Requires 3 AA (called LR6 in some countries) alkaline batteries. Batteries included are for in-store demonstration, and should be replaced to improve performance.

#### Battery Safety:

Batteries are small objects. Batteries must be replaced by an adult.

Follow the polarity (+/-) diagram in the battery compartment.

Promptly remove dead batteries from the toy.

Dispose of used batteries properly.

Remove batteries for prolonged storage.

Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

#### Sécurité relative aux piles

Necessite 3 AA piles alcalines (appelees LR6 dans certains pays). Les piles fournies sont uniquement destinées à la démonstration en magasin. Remplacez-les par des piles alcalines neuves pour améliorer les performances du produit.

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte.

Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles.

Enlevez rapidement les piles usagées du jouet.

Suivez les procédures adéquates pour vous débarrasser des piles usagées.

Retirez les piles en cas de non-usage prolongé.

Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu, car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS utiliser de piles rechargeables.

NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les terminaux d'alimentation.

#### Battery Installation:

1. Requires 3 AA batteries (called LR6 in some countries) alkaline batteries.

2. Open the battery door with a screwdriver.

3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.

4. Replace battery door securely.

#### U. S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lcanada.custhelp.com>, 24 hours a day.

You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

#### U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

#### U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

#### U.K. Office:

Telephone: 0800 169 5435

Eire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM.

**IMPORTANT:** If you have a problem with this product, return it to the retailer where the product was purchased for exchange. If the retailer is unable to assist you for any reason, contact LeapFrog Consumer Services. If our service representative is unable to help you resolve the problem, you will be given instructions on how to replace the product and an authorization number. Returns must have a return authorization number (RMA) to be accepted at our warehouse. If you need replacement parts for this product, please contact LeapFrog Consumer Services.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**AVERTISSEMENT :** Tout changement ou modification de cette unité n'ayant pas été expressément approuvé par les parties responsables de la conformité entraîne l'annulation du droit de l'utilisateur à exploiter l'équipement.

TROUBLESHOOTING	
Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"><li>• Make sure batteries are correctly installed</li><li>• Make sure battery cover is securely attached</li><li>• Remove batteries and put them back in</li><li>• Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth</li><li>• Install new batteries</li></ul>
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"><li>• Follow the above instructions to clean battery contacts</li><li>• Install new batteries</li></ul>
Toy makes improper responses	<ul style="list-style-type: none"><li>• Follow the above instructions to clean battery contacts</li><li>• Install new batteries</li></ul>
Display stops working	<ul style="list-style-type: none"><li>• Install new batteries</li></ul>

**CAUTION:** Product contains strong magnets. May scratch stainless steel surfaces.

Keep product at least 6" away from pacemakers, and avoid contact with:

- Magnetic computer media, including floppy disks, Zip disks, removable hard disk drives.
- Televisions and computer video monitors
- Other magnetic media, including audio cassette tapes, video cassette tapes, credit cards, ID badges, etc.
- Audio tape recorders
- Iron filings and other ferrous-metal shavings/particles
- Pointed objects of ferrous metal, such as nails, screw, carpet tacks, etc.

**ATTENTION :** Ce produit contient des aimants puissants. Peut rayer les surfaces en acier inoxydable.

Gardez-le à une distance minimum de 15 cm d'un stimulateur cardiaque et évitez tout contact avec :

- les supports informatiques magnétiques tels que disquettes, disques Zip, disques durs amovibles
- les postes de télévision et écrans vidéo d'ordinateur
- les autres supports magnétiques tels que bandes sur cassette audio, bandes sur cassette vidéo, cartes de crédit, badges d'identité, etc.
- les magnétophones
- la limaille de fer et autres ébarbures/particules de métaux ferreux
- les objets pointus en matériaux ferreux tels que clous, vis, punaises, etc.

#### Note:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable

protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

This Class B digital apparatus meets all the requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

#### Warranty Information

This LeapFrog® product is warranted only to the original purchaser for a period of three months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials of the product. All warranty claims are subject to: (1) LeapFrog being notified of the warranty claim within the warranty period, (2) LeapFrog verifying the existence of a defect in the product and (3) receipt of valid proof of your purchase date. Before returning a product for any reason, please notify the LeapFrog Consumer Service Department. If the service representative is unable to solve the problem, you will be provided with instructions as to how to go about having the unit repaired or replaced if it is under warranty. Return of a product under warranty is governed by the following rules—If LeapFrog believes that there may be a defect in materials or workmanship and LeapFrog confirms your purchase date, LeapFrog will provide you with prepaid shipping instructions for returning the product. Otherwise, you must return your product, shipping prepaid and with proof of purchase date, as instructed by a LeapFrog service representative.

In the event that a product under warranty is repaired or replaced, the replacement will be covered under the original warranty or for 30 days, whichever is longer. Repair or replacement is your exclusive remedy, and LeapFrog's exclusive liability, under this warranty. Replacement may consist of replacing the product with the same product or with a different product of the same value. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state and country to country.

**Canada:** In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

**U.K.:** In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog logo, FRIDGE DJ, WORD WHAMMER and FRIDGE PHONICS are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2005 LeapFrog Enterprises, Inc. All rights reserved.

Visit our fun-filled Web site at: [www.leapfrog.com](http://www.leapfrog.com)

For ages 12 months and up  
Convient aux enfants à partir de 12 mois

Part No. 605-10718-A