

# Leap Frog Lettersaurus



Roar, sing and learn letters!

**Parent Guide & Instructions**

This guide contains important information. Please keep it for future reference.

Fun next steps on your child's path to reading!

From letter play...



**Lettersaurus**  
12-36 months



**Fridge Phonics®**  
magnetic alphabet\*  
2+ years

Get more ideas to support your child's learning at:  
[leapfrog.com/learningpath](http://leapfrog.com/learningpath)

To be there every step of the way.

It's a hope you have for your child and one that LeapFrog shares. Toys like Lettersaurus help bring letters to life, encouraging children on their first steps toward reading. Get more ideas to support your child's learning at: [leapfrog.com/learningpath](http://leapfrog.com/learningpath)



**Tag™ Junior**  
book pal\*  
2-4 years

...to reading discoveries!

\*Products sold separately. All products may not be available in all countries. Actual products may vary.



## Learning Path™

**See the Learning.™**

See your child's play and learning with the LeapFrog® Learning Path. With each LeapFrog toy on your child's path, you can see the skills your child is exploring during play, learn about what comes next and discover creative learning ideas that are tailored uniquely to your child.

[leapfrog.com/learningpath](http://leapfrog.com/learningpath)



**Register your product online!**

You can also sign up to receive email updates with special offers, educational insights and the latest in learning from LeapFrog.

[leapfrog.com](http://leapfrog.com)

## Learning Stones

### Roar, sing and learn!

#### The Alphabet

Hearing the *Alphabet Song* and playing with alphabet buttons helps children learn letter names and sounds.

#### Colors/Colours

Seeing colors/colours and hearing their names helps children associate each color/colour with its name.


#### Music

Children can explore music with 26 fun and familiar tunes.

#### Motor Skills

Pressing the letter buttons on his back encourages motor skill development.

## Instructions for Play

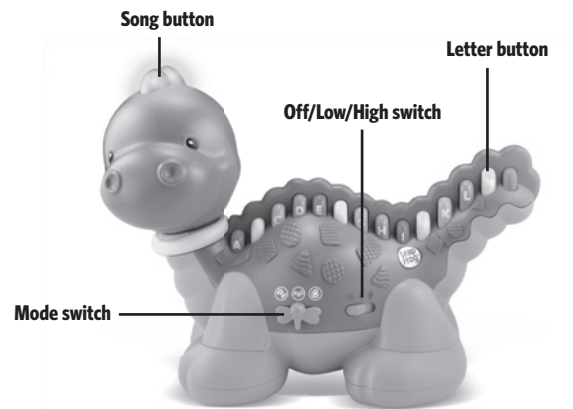

#### Getting Started

To turn on Lettersaurus, slide the volume switch to the desired volume setting. To turn it off, slide the switch to OFF.

**Note:** The Lettersaurus toy will turn off automatically after a period of inactivity. You can wake it up again by changing modes or pressing a letter button.

#### Personalize me!

I can learn the first letter of your child's name - and we can say it together! It's easy!

1. Go to [leapfrog.com/personalize](http://leapfrog.com/personalize)
2. Enter your product information
3. Follow the simple steps

#### Learning Modes

Lettersaurus offers many ways to play and learn!

##### Letter Mode

Push a letter to hear its name, sound and a word that begins with the letter! If you have personalized Lettersaurus with the first letter of your child's name, when your child presses that letter, he/she will hear a personalized response, e.g., "B! That's the first letter of your name!"

##### Colors/Colours Mode

Push a letter to hear its color/colour!

##### Music Mode

Press a letter button to play a familiar children's tune - 26 different ones! Press the song button on the Lettersaurus toy's head in any mode for the *Alphabet Song*!

#### Instructions For Care

##### For indoor, dry-location use only.

Keep food and beverages away from product. Do not spill liquid of any kind on this product as it may render it inoperative. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry before re-use. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

**CAUTION :** To be used under the direct supervision of an adult.

**ATTENTION :** Doit être utilisé sous la supervision d'un adulte.

**CAUTION :** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

**ATTENTION :** Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé à certains endroits), tenez ce jouet hors de portée des enfants.

#### Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 2 AA (called LR6 in some countries) alkaline batteries.

#### Battery Removal and Installation Instructions

1. Open the battery door with a screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

**Note:** If you remove the batteries you will need to follow the instructions to personalize Lettersaurus again with the first letter of your child's name.

#### Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

**DO NOT** incinerate used batteries.

**DO NOT** dispose of batteries in fire, as batteries may explode or leak.

**DO NOT** mix old and new batteries or types of batteries (i.e., alkaline/standard).

**DO NOT** use rechargeable batteries.

**DO NOT** recharge non-rechargeable batteries.

**DO NOT** short-circuit the supply terminals.

#### Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

**NE PAS** incinérer les piles usagées.

**NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.

**NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

**NE PAS** utiliser des piles rechargeables.

**NE PAS** recharger des piles non rechargeables.

**NE PAS** court-circuiter les terminaux d'alimentation.

## Troubleshooting

#### Symptom

Toy does not turn on or does not respond

#### Try This

- Make sure the OFF/LOW/HIGH switch is not in the OFF position
- Make sure batteries are correctly installed
- Make sure battery cover is securely attached
- Remove batteries and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Toy makes improper responses

- Follow the above instructions to clean battery contacts
- Install new batteries

#### FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

#### Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

#### Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

#### CONSUMER SUPPORT

**U.S. Consumer Service Contact:** Visit our Consumer Support website at [www.leapfrog.com/support](http://www.leapfrog.com/support) 24 hours a day.

**Canada Consumer Service Contact:** Visit our Consumer Support website at [www.leapfrog.ca/support](http://www.leapfrog.ca/support) 24 hours a day.

**U.K. Consumer Service Contact:** Visit our Consumer Support website at [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support) 24 hours a day.

**Australia Consumer Service Contact:** Please submit questions to our support staff via email at [info@funtastic.com.au](mailto:info@funtastic.com.au).

**LIMITED WARRANTY:** Subject to a limited three (3) month warranty. Visit our website at [www.leapfrog.com](http://www.leapfrog.com) for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

**GARANTIE LIMITÉE :** Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse [www.leapfrog.com](http://www.leapfrog.com) pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

For information on how this product might be recycled, visit [www.leapfrog.com/recycle](http://www.leapfrog.com/recycle) or call (800) 701-5327.

LEAPFROG, the LeapFrog logo, the LeapFrog Learning Path logo, SEE THE LEARNING, FRIDGE PHONICS, TAG and the Tag Junior logo are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © 2011 LeapFrog Enterprises, Inc. All rights reserved.

#### leapfrog.com

For ages 12-36 months.

Convient aux enfants remove de partir de 12 à 36 mois.

Item number: 19174

Part number: 605-11698-A