



# My First Book



## Hide-and-Seek at the Farm

New story discoveries with each turn of the page!

### Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

## Fun next steps on your child's reading journey!

### To be there every step of the way.

It's a hope you have for your child and one that LeapFrog shares. Toys like *Hide-and-Seek at the Farm* help inspire excitement in young children about books—one of the first steps in their journey toward a love of reading.



**MY FIRST BOOK**  
**HIDE-AND-SEEK AT THE FARM**  
6-36 months

\*Products sold separately. All products may not be available in all countries. Actual products may vary.



**Unlock more story surprises**  
**with Tag™ Junior\***  
[leapfrog.com/MyFirstBook](http://leapfrog.com/MyFirstBook)



**TAG™ JUNIOR\***  
2-4 years

Get more ideas to support your child's learning at:  
**[leapfrog.com/learningpath](http://leapfrog.com/learningpath)**



## Learning Path™

### See the Learning.™

See your child's play and learning with the LeapFrog® Learning Path. With each LeapFrog toy on your child's path, you can see the skills your child is exploring during play, learn about what comes next and discover creative learning ideas that are tailored uniquely to your child.

**[leapfrog.com/learningpath](http://leapfrog.com/learningpath)**



The LeapFrog® Learning Path is not available in all countries.

### Register your product online!

You can also sign up to receive learning progress updates, articles, product news and special offers from LeapFrog.

**[leapfrog.com](http://leapfrog.com)**

## Learning Stones

### Building a love of reading and more!

#### Animals

Fun audio and songs help children learn the names of farm animals and the sounds they make.

#### Book basics

Exploring pictures, turning pages and listening to the audio all help spark a child's interest in books.

#### First words

More than 30 spoken story lines relating to the book art help children understand words and their meanings.

## Instructions for Play



#### Getting Started

To turn on the *Hide-and-Seek at the Farm* book, slide the Off/Low/High switch on the back of the book to the desired volume setting. To turn it off, slide the switch to off.

**Note:** The *Hide-and-Seek at the Farm* book will turn off automatically after a period of inactivity. You can wake it up again by turning a page or by pressing the sun button.

#### Learning Modes

The *Hide-and-Seek at the Farm* book offers three ways to play!

#### Interactive Story Time

As your child turns pages forward or backward, he/she will hear new lines of the story. Press the sun button while the book is open to hear even more—there are more than 30 story surprises to discover!

#### Together Time

Turn the *Hide-and-Seek at the Farm* book to off to enjoy quiet time with your child as you read the story aloud.

#### Music Mode

When the book is closed, it is in Music mode. Press the sun button for fun farm songs to dance along to!

#### Instructions for Care FOR DRY, INDOOR-LOCATION USE ONLY

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.



**CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.



**ATTENTION :** Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée de votre enfant.

#### Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AAA (called LR03 in some countries) alkaline batteries.

#### Battery Removal and Installation Instructions

1. Open the battery door with a screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

#### Battery Safety

Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

**DO NOT** incinerate used batteries.

**DO NOT** dispose of batteries in fire, as batteries may explode or leak.

**DO NOT** mix old and new batteries or types of batteries (e.g., alkaline/standard).

**DO NOT** use rechargeable batteries.

**DO NOT** recharge non-rechargeable batteries.

**DO NOT** short-circuit the supply terminals.

#### Sécurité relative aux piles

Les piles sont des objets de petite taille et peuvent constituer un risque d'étranglement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

**NE PAS** incinérer les piles usagées.

**NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.

**NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

**NE PAS** utiliser des piles rechargeables.

**NE PAS** recharger des piles non rechargeables.

**NE PAS** court-circuiter les terminaux d'alimentation.

#### Troubleshooting

##### Symptom

Toy does not turn on or does not respond

##### Try This

- Make sure the Off/Low/High switch is not in the OFF position
- Make sure batteries are correctly installed
- Make sure battery cover is securely attached
- Remove batteries and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Toy makes improper responses

- Follow the above instructions to clean battery contacts
- Install new batteries

#### FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

#### Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

#### Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

#### CONSUMER SUPPORT

**U.S. Consumer Service Contact:** Visit our Consumer Support website at [www.leapfrog.com/support](http://www.leapfrog.com/support) 24 hours a day.

**Canada Consumer Service Contact:** Visit our Consumer Support website at [www.leapfrog.ca/support](http://www.leapfrog.ca/support) 24 hours a day.

**U.K. Consumer Service Contact:** Visit our Consumer Support website at [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support) 24 hours a day.

**Australia Consumer Service Contact:** Please submit questions to our support staff via email at [info@funstastic.com.au](mailto:info@funstastic.com.au).

**LIMITED WARRANTY:** Subject to a limited three (3) month warranty. Visit our website at [www.leapfrog.com](http://www.leapfrog.com) for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

**GARANTIE LIMITÉE :** Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse [www.leapfrog.com](http://www.leapfrog.com) pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisant pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

LEAPFROG, the LeapFrog logo, the LeapFrog Learning Path logo, TAG, the Tag Junior logo and SEE THE LEARNING are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2010 LeapFrog Enterprises, Inc. All rights reserved.

#### leapfrog.com

For ages 6 to 36 months. / Convient aux enfants de 6 à 36 mois.

Item number: 19154

Part number: 605-11561-B