

More fun learning toys from LeapFrog!\*

LittleTouch™  
LeapPad®  
Learning  
System

6-36 months



Bilingual  
English/  
Spanish

Learn &  
Groove™  
Musical  
Table\*\*

6-36 months



## Spin & Sing Alphabet Zoo™



Discover the  
Alphabet—  
from  
Alligator  
to  
Zebra!

### Parent Guide & Instructions

*This guide contains important information.  
Please keep it for future reference.*

[www.leapfrog.com](http://www.leapfrog.com)



## Learning Skills

### Language Development

Animal mode introduces animal names and sounds, while musical rhymes help baby identify the differences between similar-sounding words.

### Letter Recognition

The *Alphabet Song* and talking letters introduce letter recognition and the alphabet sequence to help pave the way for early language learning.

### Cause and Effect

Fun responses to each bat or touch encourage baby to try again.

### Physical Development

Spinning patterns, twinkling lights and playful music stimulate the senses and encourage movement.

Dear Parent,

We at LeapFrog know that you are your child's most important teacher. Our goal is to help you build an environment for your child that is rich in experiences—one that encourages discovery and fosters learning success.

Babies and toddlers are discovering the world for the first time. That is why we developed learning toys that introduce critical discovery skills, and encourage motor skill development and social play. They come in playful colors/colours, with engaging features that will captivate your child's imagination.

LeapFrog® learning toys are designed to grow alongside your child through each stage of development. All are made with the same playful spirit that promotes a lifelong love of learning. For additional information on how to make learning fun and effective, visit our website ([www.leapfrog.com](http://www.leapfrog.com)), where you'll find tips from parents and educators. We hope you'll join us there.

Sincerely,

Jeffrey Katz  
President & CEO  
LeapFrog Enterprises, Inc.

\*Not all products are available in all markets. Additional products sold separately.  
\*\*Bilingual LeapStart™ Learning Table (English/French) available in select countries.

## INSTRUCTIONS FOR PLAY

Learn about the letter or animal framed by the arrows when the wheel stops!

Spin the wheel to hear a learning song!

Select Letter, Animal or Music mode!

Volume switch

Battery compartment (located under the toy)



### Getting Started:

To turn ON the SPIN & SING ALPHABET ZOO activity toy, slide the green selector switch from the OFF position to any of the three learning modes. The toy may be turned OFF by returning the selector switch to the OFF position.

**Note:** The product will automatically turn off after 1 minute of inactivity. If the product has timed out, you can wake it up again by spinning the wheel or sliding the green selector switch to a new mode.

### Learn Your ABCs in Letter Mode!

To explore the letters of the alphabet, move the selector switch to the ABC icon (Letter mode). Each time baby spins the wheel, a happy *Letter Spin* song will play and lights on the wheel will sparkle, stimulating baby's senses. When the wheel stops, the arrows on the front of the wheel will light up, and baby will hear the name of the letter to which the arrows point.

### Meet 26 Different Animals in Animal Mode!

To learn about the animals on the SPIN & SING ALPHABET ZOO activity toy, move the selector switch to the animal-shaped icon (Animal mode). Each time baby spins the wheel, the wheel will respond with a playful *Animal Spin* song and softly flashing lights. When the wheel stops, the arrows on the front of the wheel will light up, and baby will hear the name of the animal indicated, along with its sound.

### Sing with the Animals in Music Mode!

To dance and learn to the *Alphabet Song*, move the selector switch to the musical notes icon (Music mode). With each touch or bat of the wheel, baby will be rewarded with colorful/ colourful lights and a jazzy rendition of the *Alphabet Song*. Each time the wheel stops on an animal, a funny animal sound will play!

### Instructions for Care

Keep food and beverages away from product.

Clean with a slightly damp cloth (cold water).

Do not use soap or detergent.

Never submerge the unit in water.

Remove batteries during prolonged storage.

Avoid prolonged exposure to extreme temperatures and direct sunlight.

Avoid dropping the unit. Never try to dismantle it.

### Battery Information

Batteries included are for in-store demonstration and should be replaced to improve performance. Requires 3 AA (called LR6 in some countries) alkaline batteries.

### Battery Safety

Batteries are small objects. Batteries must be replaced by an adult.

Follow the polarity (+/-) diagram in the battery compartment.

Promptly remove dead batteries from the toy.

Dispose of used batteries properly.

Remove batteries for prolonged storage.

Only batteries of the same or equivalent type as recommended are to be used.

Batteries used for in-store demonstration should be replaced with alkaline batteries for home use.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (i.e., alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

### Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte.

Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles.

Enlevez rapidement les piles usagées du jouet.

Suivez les procédures adéquates pour vous débarrasser des piles usagées.

Retirez les piles en cas de non-usage prolongé.

Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

Les piles incluses dans les produits lors de l'achat sont uniquement destinées aux démonstrations en magasin et doivent être remplacées pour améliorer les performances du produit.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS utiliser des piles rechargeables.

NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les terminaux d'alimentation.

### Battery Removal and Installation Instructions

1. Requires 3 AA (called LR6 in some countries) alkaline batteries.
2. Open the battery door with a screwdriver.
3. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of the battery.
4. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
5. Replace battery door securely.

### ⚠ CAUTION:

Product contains strong magnets.

Keep at least 6 inches (15 cm) away from pacemakers and avoid contact with the following:

- Magnetic computer media, including floppy disks and removable hard disk drives
- Televisions and computer video monitors
- Other magnetic media, including audio cassette tapes, credit cards, ID badges, etc.
- Audio tape recorders
- Iron filings and other ferrous-metal shavings/particles
- Pointed objects of ferrous materials, such as nails, screws, carpet tacks, etc.

### ⚠ ATTENTION :

Ce produit contient des aimants puissants. Gardez-le à une distance minimum de 6 pouces

(15 cm) d'un stimulateur cardiaque et évitez tout contact avec:

- les supports informatiques magnétiques tels que disquettes, disques Zip, disques durs amovibles
- les postes de télévision et écrans vidéo d'ordinateur
- les autres supports magnétiques tels que bandes sur cassette audio, bandes sur cassette vidéo, cartes de crédit, badges d'identité, etc.
- les magnétophones
- la lamaille de fer et autres ébarbures/particules de métaux ferreux
- les objets pointus en matériaux ferreux tels que clous, vis, punaises, etc.

## TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"><li>• Make sure the Mode Selector switch is not in the OFF position</li><li>• Make sure batteries are correctly installed</li><li>• Make sure battery cover is securely attached</li><li>• Remove batteries and put them back in</li><li>• Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth</li><li>• Install new batteries</li></ul>
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"><li>• Follow the above instructions to clean battery contacts</li><li>• Install new batteries</li></ul>
Toy makes improper responses	<ul style="list-style-type: none"><li>• Follow the above instructions to clean battery contacts</li><li>• Install new batteries</li></ul>

### U.S./Canada Consumer Service Contact

Please visit our U.S. Consumer Support website at <http://www.leapfrog.com/support> or our Canada Consumer Support website at <http://lcanada.custhelp.com>. You can search for frequently asked questions, review your previous questions or submit a question to our support staff via email 24 hours a day.

### U.S./Canada Office

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time

### U.K. Consumer Service Contact

Please visit our U.K. Consumer Support website at <http://leapfroguk.custhelp.com>. You can search for frequently asked questions or submit a question to our support staff via email 24 hours a day.

### U.K. Office

Telephone: 0800 169 5435

Eire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM

### Australia Consumer Service Contact

Please submit questions to our support staff via email at [info@funtastic.com.au](mailto:info@funtastic.com.au) or free-call

1800 244 543.

### Australian Distributor

Telephone: 1800 244 543

Hours: Monday through Friday, 8:30 AM to 5:00 PM

**IMPORTANT: If you have a problem with this product, return it to the retailer where the product was purchased for exchange. If the retailer is unable to assist you for any reason, contact LeapFrog Consumer Services. If our service representative is unable to help you resolve the problem, you will be given instructions on how to replace the product and an authorization/authorisation number. Returns must have a Return Merchandise Authorization/Authorisation (RMA) number to be accepted at our warehouse. If you need replacement parts for this product, please contact LeapFrog Consumer Services.**

### FCC NOTICE:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses and can

radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

**NOTE:** Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc. could void the user's authority to operate the equipment.

This Class B digital apparatus meets all the requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

### Warranty Information

This LeapFrog® product is warranted only to the original purchaser for a period of three months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials of the product. All warranty claims are subject to: (1) LeapFrog being notified of the warranty claim within the warranty period, (2) LeapFrog verifying the existence of a defect in the product and (3) receipt of valid proof of your purchase date.

Before returning a product for any reason, please notify the LeapFrog Consumer Service Department. If the service representative is unable to solve the problem, you will be provided with instructions as to how to go about having the unit repaired or replaced if it is under warranty. Return of a product under warranty is governed by the following rules: If LeapFrog believes that there may be a defect in materials or workmanship and LeapFrog confirms your purchase date, LeapFrog will provide you with prepaid shipping instructions for returning the product. Otherwise, you must return your product, shipping prepaid and with proof of purchase date, as instructed by a LeapFrog service representative.

In the event that a product under warranty is repaired or replaced, the replacement will be covered under the original warranty or for 30 days, whichever is longer. Repair or replacement is your exclusive remedy, and LeapFrog's exclusive liability, under this warranty. Replacement may consist of replacing the product with the same product or with a different product of the same value. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state and country to country.

**Canada:** In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

**U.K.:** In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the three-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. You may also have other rights under U.K. law, which this warranty does not limit.

**Australia:** You may also have other rights under consumer protection conditions and warranties implied by Australia federal, state and territory laws.

LEAPFROG, the LeapFrog Baby logo, LITTLETOUCH, LEAPPAD, LEARN & GROOVE, LEAPSTART and SPIN & SING ALPHABET ZOO are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2006 LeapFrog Enterprises, Inc. All rights reserved.

U.S. Patent Number(s) 5,997,304; B1 5,188,533 and 6,761,611.

Visit our fun-filled website at [www.leapfrog.com](http://www.leapfrog.com)!

For ages 6 months and up  
Convient aux enfants à partir de 6 mois