

Learn Something New  
Every Day!™



Talking Words Factory™  
DVD and VHS  
3 years +

Distributed by Warner Home Video Inc.



Leap's Phonics™ Library  
3 years +



Super Saver™  
Teaching Bank\*  
4 years +



Leapster™ Multimedia  
Learning System  
4-8 years

\* Not all products available in all markets.

## Tad's Special Words!



Spell Tad's special words on the Word Whammer™  
Fridge Phonics™ Set to hear a surprise!

BUG DOG PIG  
CAT HEN POP  
DAD MOM TAD

Ready for more words? Visit [www.leapfrog.com](http://www.leapfrog.com)  
and find the Word Whammer™ Fridge Phonics™ Set.  
You can print complete word lists that will encourage  
your child to spell new words!

Dear Parents,

We at LeapFrog know that you are your child's most important teacher. Our goal is to help you build an environment for your child that is rich in experiences—one that encourages discovery and fosters learning success.

As children grow, they are ready for more complex challenges. For preschoolers, we have a line of products that develop basic fundamentals to help prepare children to enter the classroom. Cheerful characters and delightful songs enhance the play experience while teaching the alphabet, phonics, vocabulary, colors/colours, numbers and counting.

LeapFrog™ learning toys are designed to grow alongside your child through each stage of development. All are made with the same playful spirit that promotes a lifelong love of learning. For additional information on how to make learning fun and effective, visit our Web site ([www.leapfrog.com](http://www.leapfrog.com)), where you'll find tips from parents and educators. We hope you'll join us there.

Sincerely,

Tom Kalinske  
CEO  
LeapFrog Enterprises, Inc.

## Parent Guide & Instructions

This guide contains important information.  
Please keep it for future reference.



Create over 325 words with magnetic  
letters that sing and teach!






**WORD WHAMMER™**  
Fridge Phonics™ Set

## INSTRUCTIONS FOR PLAY



**What's a Word Whammer?** It's a machine that teaches all about letter names, letter sounds, and how letter sounds blend together to make words! WORD WHAMMER™ FRIDGE PHONICS™ Set allows you to create over 325 three-letter words, using magnetic letters that sing and teach! These interactive, magnetic letters are based on LeapFrog's TALKING WORDS FACTORY™ video.

### 3 Ways to Play!

- **Letter Hunt**  – Learn letter names and sounds through fun songs! Put a letter in the spot with the blinking red light.
- **Word Builder**  – Explore letter combinations and create over 325 words! Place any 3 letters in the magnetic reader to see if you've spelled a word! Tad's 10 special words (bug, cat, dad, dog, hen, mom, pig, pop, tad, ten) will trigger a special response!
- **Word Hunt**  – Spell three-letter words, then replace letters to make rhyming words! The WORD WHAMMER™ FRIDGE PHONICS™ Set will say a word and guide your child, letter by letter, to spell the word. Then, it's time to make a rhyme! When you build a word that has related rhyming words, the WORD WHAMMER™ FRIDGE PHONICS™ Set will prompt you to change the starting letter to make a rhyming word!

**Parent Alert:** To protect sensitive ears, certain letter combinations that might be perceived as foul language will not be sounded out. The WORD WHAMMER™ FRIDGE PHONICS™ Set will only pronounce letter names for such combinations.

### Care and Maintenance:

- Keep product away from foods and beverages.
- Clean with a slightly damp cloth.
- Never submerge the product in water.
- Remove batteries during prolonged storage.
- Avoid exposing product to extreme temperatures.

### Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy.

Remove batteries for prolonged storage.

Dispose of used batteries properly.

Only batteries of the same or equivalent type as recommended are to be used.

- **DO NOT** incinerate used batteries.
- **DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- **DO NOT** mix old and new batteries or types of batteries (i.e. alkaline/standard).
- **DO NOT** use rechargeable batteries.
- **DO NOT** recharge non-rechargeable batteries.
- **DO NOT** short-circuit the supply terminals.

### Sécurité relative aux piles :

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte.

Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles.

Enlevez rapidement les piles usagées du jouet.

Retirez les piles en cas de non-usage prolongé.

Suivez les procédures adéquates pour vous débarrasser des piles usagées.

Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

- **NE PAS INCINÉRER** les piles usagées.
- **NE PAS JETER** les piles au feu, car elles peuvent exploser ou fuir.
- **NE PAS MÉLANGER** piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).
- **NE PAS UTILISER** de piles rechargeables.
- **NE PAS RECHARGER** des piles non rechargeables.
- **NE PAS COURT-CIRCUITER** les terminaux d'alimentation.

### Battery Information:

1. Requires 2 AA (called LR6 in some countries) alkaline batteries.
2. Open the battery door with a screwdriver.
3. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
4. Replace battery door securely.

TROUBLESHOOTING	
Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> <li>• Make sure batteries are correctly installed</li> <li>• Make sure battery cover is securely attached</li> <li>• Remove batteries and put them back in</li> <li>• Clean battery contacts with rubbing alcohol</li> <li>• Install new batteries</li> </ul>
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> <li>• Install new batteries</li> <li>• Clean battery contacts with rubbing alcohol</li> </ul>
Toy makes improper responses	<ul style="list-style-type: none"> <li>• Install new batteries</li> <li>• Clean battery contacts with rubbing alcohol</li> </ul>
Magnets do not adhere well	<ul style="list-style-type: none"> <li>• Clean magnets with cold water and a slightly damp cloth. Use mild soap, if necessary.</li> <li>• Do not submerge magnetic reader in water.</li> </ul>

### U.S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lcanada.custhelp.com>, 24 hours a day. You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

### U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

### U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

### U.K. Office:

Telephone: 0800 169 5435 Eire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM.

**IMPORTANT:** Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**AVERTISSEMENT :** Tout changement ou modification de cette unité n'ayant pas été expressément approuvé par les parties responsables de la conformité entraîne l'annulation du droit de l'utilisateur à exploiter l'équipement.

### CAUTION:

- Product contains strong magnets.
- Keep product at least 6" away from pacemakers, and avoid contact with:
  - Magnetic computer media, including floppy disks, Zip disks, removable hard disk drives.
  - Televisions and computer video monitors
  - Other magnetic media, including audio cassette tapes, video cassette tapes, credit cards, ID badges, etc.
  - Audio tape recorders
  - Iron filings and other ferrous-metal shavings/particles
  - Pointed objects of ferrous metal, such as nails, screw, carpet tacks, etc.
- May scratch stainless steel surfaces.

### AVERTISSEMENT :

- Ce produit contient des aimants puissants.
- Gardez-le à une distance minimum de 15 cm d'un stimulateur cardiaque et évitez tout contact avec :
  - les supports informatiques magnétiques tels que disquettes, disques Zip, disques durs amovibles
  - les postes de télévision et écrans vidéo d'ordinateur
  - les autres supports magnétiques tels que bandes sur cassette audio, bandes sur cassette vidéo, cartes de crédit, badges d'identité, etc.
  - les magnétophones
  - la limaille de fer et autres ébarbures/particules de métaux ferreux
  - les objets pointus en matériaux ferreux tels que clous, vis, punaises, etc
- Peut rayer les surfaces en acier inoxydable.

### Note:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

### Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

**Canada:** In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

**U.K.:** In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog logo, WORD WHAMMER, FRIDGE PHONICS, TALKING WORDS FACTORY, LEARN SOMETHING NEW EVERY DAY, LEAP'S PHONICS, SUPER SAVER and LEAPSTER are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2004 LeapFrog Enterprises, Inc. All rights reserved. U.S. Patent No. B1 5,188,533 and Patent Pending.

Visit our fun-filled Web site at: [www.leapfrog.com](http://www.leapfrog.com)

For ages 3 years and up / À partir de 3 ans

Part No. 605-10456-A